VINCENT SHEPPARD



WICKED COLLECTION

PRODUCT DATA SHEET

WICKED COLLECTION





WICKED LOUNGE CHAIR



WICKED LOUNGE SOFA 3S



WICKED SIDE TABLE





WICKED LOUNGE SOFA 2S



VINCENTSHEPPARD.COM

WICKED COLLECTION

WICKED

frame	aluminium		
frame finish	black or white powder coate		
seat	HDPE wicker		
seat color	taupe or natural		
top/finish	untreated teak		
glides	black nylon		

COLOURS






CUSHION

 
foam	dining chair: 2 cm polyether foam				
	lounge chair: 10 cm quick dry foam				
removable	yes				
fabrics	see fabric data sheet for more info				

PROTECTIVE COVERS

We recommend using protective covers only on dry teak furniture.

dining chair	PC001
lounge chair	PC002
lounge sofa 2S	PC003
lounge sofa 3S	PC005

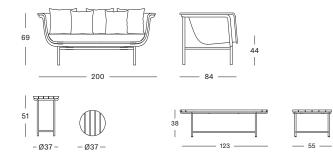



CERAMIC

If you're looking for a material which requires little to no maintenance, yet offers maximum resistance, you would do well to involve ceramic. The material preserves the natural look of stone and offers top of the chart convenience. Cleaning the table with water and mild soap will do the trick!

POLYPROPYLENE ROPE


Another material used for our all-weather furniture, is rope. Our rope is made of polypropylene fibres or acrylic. Just like our other synthetic materials, the rope is designed to withstand any weather condition and can be left outside all year long.

For maintaining your rope furniture, we recommend using a fabric and upholstery protector to give optimal stain resistance.

To clean spots on the rope, we suggest applying a mist of soapy water with a spray bottle and then work the solution into the rope with a soft cloth by patting or rubbing lightly. Rinse the solution thoroughly and then blot excess moisture from the rope using a soft cloth and allow air-drying.

Never use a high-pressure hose on polypropylene rope.

DIMENSIONS

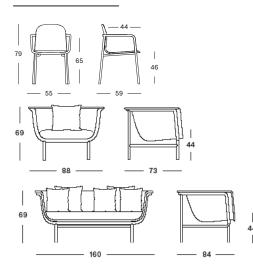

MAINTENANCE AND CARE

STAINED TEAK

FOR DAILY CARE

Use a moist towel or sponge with a mild solution of water and natural, non-aggressive soap.

FOR STUBBORN STAINS

If your furniture is stained, consider one of the following options:

• Grease spots have appeared on the furniture

This is a natural feature of the wood and grease spots should gradually disappear after being exposed to sunlight. However, should you wish to remove these blemishes, we recommend using a degreasing agent and gentle scrubbing with a brush. Rinse off with clean water.

- The furniture has developed mildew spots or black blemishes This is usually the result of rainwater or sometimes sap dripping from the leaves of trees onto the wood leaving dark marks and spots. Ideally, we recommend the furniture is not placed under trees. However, these marks can be removed by lightly sanding with fine sandpaper.
- You spilled wine or something else leaving persistent stains For wine and other stains, we recommend using a weak solution of bleach and water combined with a dishwashing agent to wipe the area clean.

WICKED COLLECTION

IN THIS COLLECTION

WICKED	ITEM CODE	FINISH	PACKAGE DIMENSION (cm/inch)		СВМ	CBM (m³/ft³)		WEIGHT (kg/lb)	
dining chair	GD185S021 GD185S030	black / taupe white / natural	117 x 62 x 58	46 x 24 x 23	0,42	14.86	7,37	16.25	
lounge chair	GC037S021 GC037S030	black / taupe white / natural	80 x 100 x 80	31 x 39 x 31	0,64	22.60	9	19.84	
lounge sofa 2S	GC040S021 GC040S030	black / taupe white / natural	76 x 164 x 86	30 x 65 x 34	1,07	37.85	22	48.50	
lounge sofa 3s	GC036S021 GC036S030	black / taupe white / natural	80 x 210 x 80	31 x 83 x 31	1,28	47.46	41	90.39	
side table	GT070S021 GT070S030	black / untreated teak white / untreated teak	44 x 46 x 46	17.3 x 18 x 18	0,09	3.2	5,5	12.13	
coffee table	GT071S021 GT071S030	black / untreated teak white / untreated teak	42 x 132 x 63	17 x 52 x 25	0,35	12.33	19,1	42.11	
dining table 200	GT166A007	black / untreated teak	15 x 204 x 95	6 x 80 x 37	0,29	10.21	48,15	106.15	
dining table 250	GT167A008	black / untreated teak	15 x 254 x 95	6 x 100 x 37	0,09	12.71	56,8	125.22	