

VINCENT
SHEPPARD



FREYA DINING ARMCHAIR

PRODUCT DATA SHEET

FREYA DINING ARMCHAIR



FREYA DINING ARMCHAIR

FREYA


frame	teak
frame finish	solid untreated teak with brass details
glides	black nylon

FRAME FINISH



UNTREATED
TEAK

DIMENSIONS

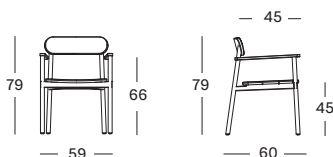

PROTECTIVE COVERS

dining chair PC001

CUSHION

foam	4 cm quick dry foam filling
removable	yes
fabrics	see fabric data sheet for more info

VARIANTS

FREYA	ITEM CODE	FINISH	PACKAGE DIMENSION (cm/inch)		CBM (m ³ /ft ³)	WEIGHT (kg/lb)
dining chair	GD190W002	untreated teak	66 x 75 x 95	26 x 30 x 37	0,47 16.6	7,23 15.9

MAINTENANCE AND CARE

TEAK

Daily care

Use a moist towel or sponge with a mild solution of water and natural, non-aggressive soap.

Protective cover

Make sure the chairs and cushion are dry before covering them!

Stubborn stains

If your furniture is stained, consider one of the following options:

- **Grease spots have appeared on the furniture**
This is a natural feature of the wood and grease spots should gradually disappear after being exposed to sunlight. However, should you wish to remove these blemishes, we recommend using a degreasing agent and gentle scrubbing with a brush. Rinse off with clean water.
- **The furniture has developed mildew spots or black blemishes**
This is usually the result of rainwater or sometimes sap dripping from the leaves of trees onto the wood leaving dark marks and spots. Ideally, we recommend the furniture is not placed under trees. However, these marks can be removed by lightly sanding with fine sandpaper.
- **You spilled wine or something else leaving persistent stains**
For wine and other stains, we recommend using a weak solution of bleach and water combined with a dishwashing agent to wipe the area clean.